






125mm Ventilation Kit Installation guide

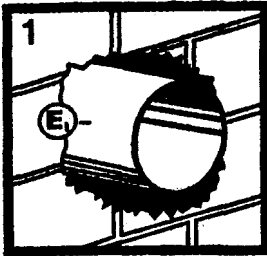


1. Find a suitable position for your air-conditioner outlet. Prepare a hole in the wall equivalent to the diameter of the tubing (E).

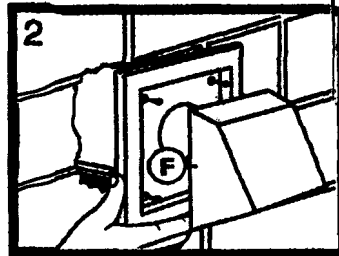


2. Push assembly into prepared hole and mark fixing positions. Remove assembly and drill suitable holes for fixings provided. (Do not fix)

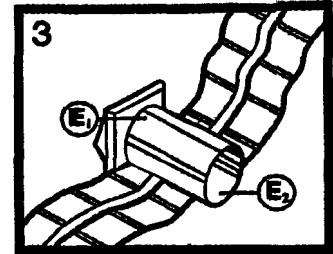


3. Ensure the assembled tubing (E1) extends at least 50mm into the room. Tape the joint with PVC sealing tape supplied. Insert wall plugs and fix backplate assembly using fixings supplied. Finally attach hood/Louvre (F2).

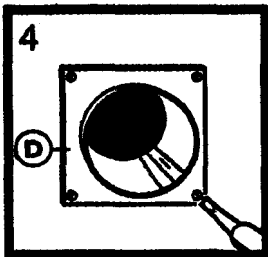


4. The wall cover plate(D) should be positioned over the opening and secured into place using the screws and wall plugs provided.

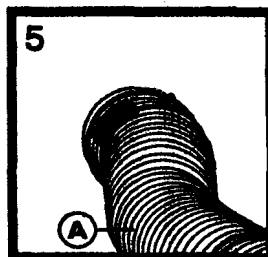

5. Unravel the flexible hose completely. Unscrew the units adaptor and screw the ventilation kit adaptor on. (Note the left hand thread)

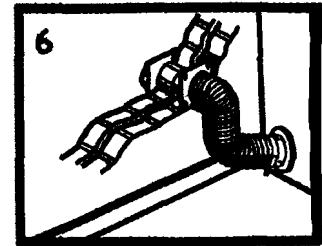

7. Fit one end of the flexible hose to the unit and the other to the unit and tape securely into place.

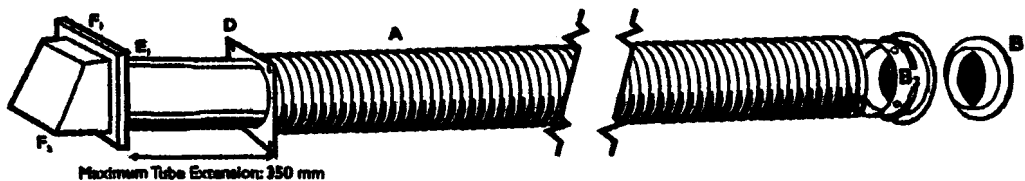

www.jshumidifiers.com

JS Humidifiers plc

Artex Avenue, Rustington, LITTLEHAMPTON,
West Sussex, BN16 3LN, UK.
Tel: (+44) 01903 850 200 Fax: (+44) 01903 850 345
email: sales@jshumidifiers.com



Humidity Group
© 2004 JS Humidifiers plc

